

# INSTRUCTIONS: UTV BUCKET SEAT COVER

**⚠ CAUTION**  
 Be sure that your seat covers do not interfere with the controls of your UTV.



## Installation


Refer to your vehicle operator's manual for proper instruction on how to remove or tilt your seats before installation of your cover.

Your seat cover bottom has an elastic cord and will fit easily over your seat bottom.

If your seat cover back has elastic cords and a hook, pull the cords towards each other and fasten with the hook (Fig. 1).

If your seat cover back has a zipper and rip-and-grip, pull the cover over the seat back, close the zipper [A] and then pull the flap with the rip-and-grip [B] from the front under the seat back and close it (Fig. 2).

Make sure the cover does not interfere with reinstallation of your seat.

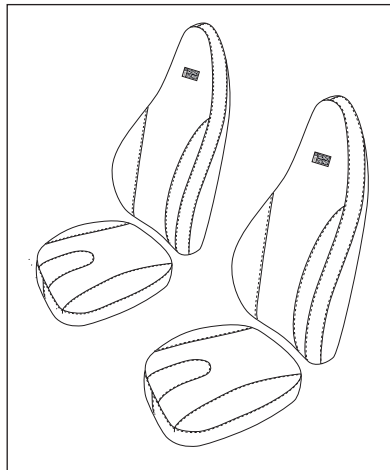

## Cleaning

Clean your seat covers with a soft brush and warm water. **DO NOT USE SOAP** as it can damage the protective coatings on the fabric. Air dry.

## Storage

To avoid mildew be sure that your seat covers are completely dry before you store them for an extended period in an enclosed area.

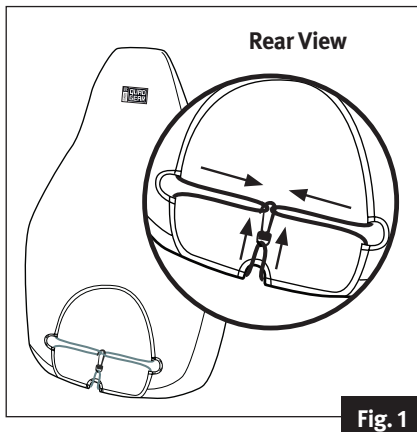


Fig. 1

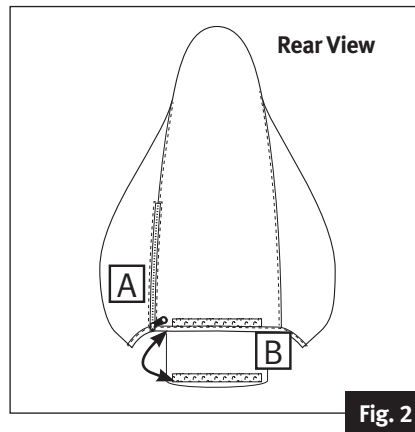


Fig. 2

- DO NOT USE SOAP  
 NE PAS UTILISER DE SAVON  
 NO USAR JABÓN
- DO NOT PACK WET  
 NE PAS RANGER MOUILLÉ  
 NO GUARDAR HÚMEDO
- NOT WATERPROOF  
 NON IMPERMÉABLE  
 NO ES IMPERMEABLE
- NO TOOLS REQUIRED  
 AUCUN OUTIL NÉCESSAIRE  
 NO REQUIERE HERRAMIENTAS
- NO BLEACH  
 NE PAS JAVELLISER  
 NO USAR LEJÍA
- LINE DRY  
 ÉTENDRE MOUILLÉ  
 COLGAR PARA SECAR
- DO NOT IRON  
 NE PAS REPASSER  
 NO PLANCHAR