

INSTRUCTIONS: UTV BUCKET SEAT COVER

⚠ CAUTION
Be sure that your seat covers do not interfere with the controls of your UTV.



Installation


Refer to your vehicle operator's manual for proper instruction on how to remove or tilt your seats before installation of your cover.

Install head rest covers so that the fabric shapes align with your UTV frame.

Slip on your seat covers starting first with the seat backs [1] and then stretch them over the seat bottoms.

If your seat cover has hooks, fasten them to each other across the back for a secure fit [2].

Make sure the cover does not interfere with reinstallation of your seat.

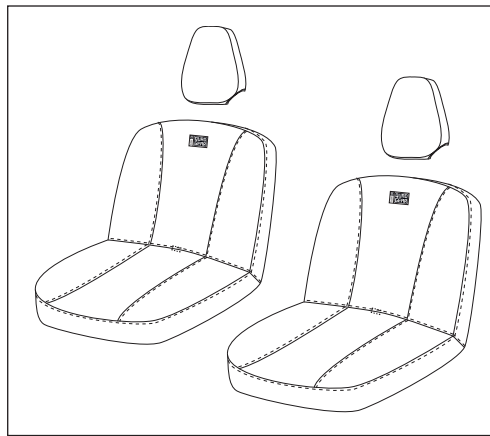


Cleaning

Clean your seat covers with a soft brush and warm water. **DO NOT USE SOAP** as it can damage the protective coatings on the fabric. Air dry.

Storage

To avoid mildew be sure that your seat covers are completely dry before you store them for an extended period in an enclosed area.

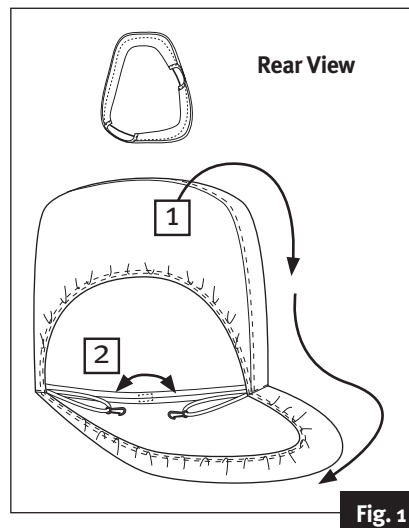

DO NOT USE SOAP
 NE PAS UTILISER DE SAVON
 NO USAR JABÓN



DO NOT PACK WET
 NE PAS RANGER MOUILLÉ
 NO GUARDAR HÚMEDO



NOT WATERPROOF
 NON IMPERMÉABLE
 NO ES IMPERMEABLE



NO TOOLS REQUIRED
 AUCUN OUTIL NÉCESSAIRE
 NO REQUIERE HERRAMIENTAS



NO BLEACH
 NE PAS JAVELLISER
 NO USAR LEJÍA



LINE DRY
 ÉTENDRE MOUILLÉ
 COLGAR PARA SECAR



DO NOT IRON
 NE PAS REPASSER
 NO PLANCHAR