

INSTRUCTIONS: UTV BENCH SEAT COVER

⚠ CAUTION
 Be sure that your seat covers do not interfere with the controls of your UTV.



Installation

Refer to your vehicle operator's manual for proper instruction on how to remove or tilt your seats before installation of your cover.

If your UTV has head rests, attach the head rest covers with the rip-and-grip straps.

Slip your seat cover over the seat bottom and connect the rip-and-grip straps to each other for a secure fit (Fig 1).

Make sure the cover does not interfere with reinstallation of your seat.

If your back rest cover has cord locks, pull them tight to adjust the fit [A].

If your back rest cover has elastic cord and hooks, insert the hook(s) across the back into either the D-ring(s) or elastic cord for a tight fit (Fig 2).

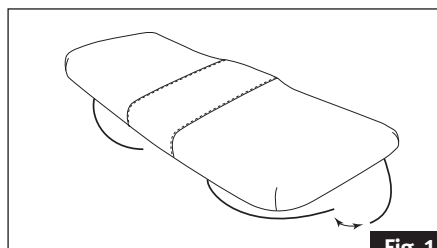 
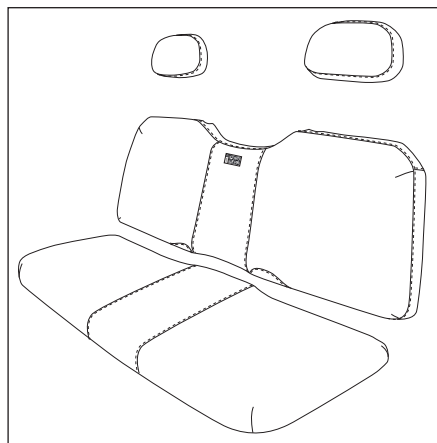 



Fig. 1

Cleaning

Clean your seat covers with a soft brush and warm water. **DO NOT USE SOAP** as it can damage the protective coatings on the fabric. Air dry.

Storage

 To avoid mildew be sure that your seat covers are completely dry before you store them for an extended period in an enclosed area.

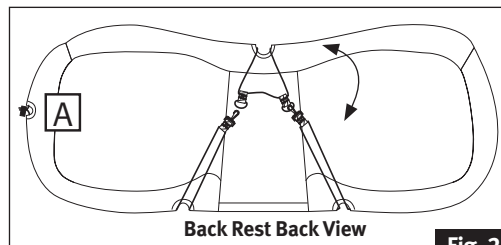

Back Rest Back View

Fig. 2

- DO NOT USE SOAP
 NE PAS UTILISER DE SAVON
 NO USAR JABÓN
- DO NOT PACK WET
 NE PAS RANGER MOUILLÉ
 NO GUARDAR HÚMEDO
- NOT WATERPROOF
 NON IMPERMÉABLE
 NO ES IMPERMEABLE
- NO TOOLS REQUIRED
 AUCUN OUTIL NÉCESSAIRE
 NO REQUIERE HERRAMIENTAS
- NO BLEACH
 NE PAS JAVELLISER
 NO USAR LEJÍA
- LINE DRY
 ÉTENDRE MOUILLÉ
 COLGAR PARA SECAR
- DO NOT IRON
 NE PAS REPASSER
 NO PLANCHAR